

## Set Top Box Operating Instructions

1. Please locate your 20m Coaxial Cable and High Definition Set Top Box (model may vary slightly)



2. Please ensure inside the box you have a Set Top Box Tuner, Remote Control, 2 x AAA Batteries inside the remote, and a Power Plug/lead.



3. Attach the power plug into the set top box. Insert the 2 AAA batteries into the remote (they may already be in there), followed by the back plate to secure the batteries in place.



4. Connect the HDMI cable into the back of the set top box; the other end will then be connected to the HDMI input on the projector. Attach one end of the Coaxial cable into the back of the set top box, and the other end to your existing coaxial output which is on a wall plate (generally located inside your house). It is the same connection on the wall that your TV is already plugged into so you will need to unplug your TV from the wall connection first.



5. Place the Set Top Box next to the projector and plug the power adapter into the power board, which we recommend is generally located beneath the projector. The Set Top Box should turn on automatically with a display on the front screen similar to that below.



6. Once the set top box has "booted" the image should then appear on the screen that the projector is pointed at (note that it will need to be dark before you can see the image). You may or may not see T.V stations already displayed, however we recommend that you retune the set top box to gain access to your local stations. Press the menu button on the remote to access the following dialogue.



7. Use the directional pad on the remote to navigate across and down to “Auto Search” and press OK. If you are asked for a password, simply use the numbers on the remote to enter “0000” to proceed.



8. You may be presented with the following warning, use the directional pad to navigate it across to say “YES” and press “OK” on the remote to proceed.



9. You will now be presented with a screen similar to this. You do not have to do anything on this screen; simply wait for it to finish searching for your local stations. The progress is indicated via the green bars in the middle of the screen. This could take 5-10 minutes so it is best to leave it and return later.



10. Once your local channels have been found and added to the set top box, you will automatically be redirected to the main menu again, like the below image shows.



11. Press the exit button on the remote a few times to exit the menu and return to watching T.V. Change TV channels using the Channel up and down buttons on the remote.

When you have finished using the equipment, please place all items back into the box as shown in diagram #2 with the batteries removed from the remote control.

